



aimshop



• LAP TIMERS • LOGGERS • CAMERAS • DASHES • SENSORS • AND MORE

SHOP NOW

Channels received by AIM loggers connected to EFI Euro6 new Euro 12 new ECU are:

EFI Euro6 new Euro 12 new communication protocol

ID	CHANNEL NAME	FUNCTION	
ECU_1	EFI_RPM	RPM	EFI Euro 6 new Euro 12 new Communication protocol Release 1.00
ECU_2	EFI_TPS1	Throttle position sensor bank 1	
ECU_3	EFI_TPS2	Throttle position sensor bank 2	
ECU_4	EFI_MAP	Manifold air pressure bank 1	
ECU_5	EFI_MAP2	Manifold air pressure bank 2	
ECU_6	EFI_DFARF	Throttle position derivative	
ECU_7	EFI_DMAP	Manifold pressure Derivative	
ECU_8	EFI_AE	Fuel enrichment for positive TPS transient	
ECU_9	EFI_DE	Fuel enrichment for negative TPS transient	
ECU_10	EFI_WHEELSPD	Driven wheel speed	
ECU_11	EFI_DRAXSSPD	Driving wheel speed	
ECU_12	EFI_SLIP	Slip factor	
ECU_13	EFI_OSASLIP	Ignition cut vs slip factor	
ECU_14	EFI_DfarfCalc	Calculated throttle position derivative	
ECU_15	EFI_PPSpc	Throttle request	
ECU_16	EFI_TINJ1	Injection time for cylinder 1	
ECU_17	EFI_TINJ5	Injection time for cylinder 5	
ECU_18	EFI_TERROGBASE	Injection table - injection time	
ECU_19	EFI_TEROG	Real injection time	
ECU_20	EFI_SABASE	Injection table - injection time	
ECU_21	EFI_SA	Real spark advance	
ECU_22	EFI_NTK1	Lambda value 1	
ECU_23	EFI_NTK2	Lambda value 2	
ECU_24	EFI_KFUELLEARN	Fuel correction coefficient for auto mapping	
ECU_25	EFI_CLC1	Closed loop control 1 (injection)	
ECU_26	EFI_CLC2	Closed loop control 2 (injection)	
ECU_27	EFI_GEAR	Engaged gear	
ECU_29	EFI_GEARSHIFTTIME	Gear shift time	
ECU_30	EFI_OILPRESS	Oil pressure	
ECU_31	EFI_FUELPRESS	Fuel pressure	
ECU_32	EFI_FASE_L	Lower injectors phase	



EFI Euro 6 new Euro 12 new
Communication protocol
Release 1.00

ECU_33	EFI_FASE_H	Upper injectors phase
ECU_34	EFI_KFuelCntCrk	Cranking fuel multiplier
ECU_35	EFI_KinjHIGHperc	Terog_U/Terog_L
ECU_36	EFI_BATTVOLTDIR	Direct battery supply
ECU_37	EFI_BATTVOLTKEY	ECU voltage supply
ECU_44	EFI_AEDFarfl	Fuel enrichment for positive TPS transient derivative
ECU_45	EFI_Slip Calc	Calculated slip (with engine strategies)
ECU_46	EFI_SPEED FR	Front right wheel speed (ECU Reference speed)
ECU_47	EFI_SELEEPROM	Selected Engine Map
ECU_48	EFI_WATERTEMP	Water temperature
ECU_49	EFI_OILTEMP	Oil temperature
ECU_50	EFI_FUELTEMP	Fuel temperature
ECU_51	EFI_AIRTEMP01	Air temperature bank 01
ECU_52	EFI_AIRTEMP02	Air temperature bank 02
ECU_54	EFI_KFUELCAL	Calibration fuel multiplier
ECU_56	EFI_FUELUSED	Injected fuel
ECU_57	EFI_FUELLEFT	Left fuel



VISIT SUPPORT CENTER

SOFTWARE DOWNLOADS | FIRMWARE UPDATES | PRODUCT DOCUMENTATION

