



## FAQ

Frequently asked questions

---

Demo Mode





Switch-on

## Demo Mode

---

**Question:**

My MyChron5 shows random data and LED blinks changing colour. Why?

**Answer:**

At switch-on Demo Mode has been accidentally activated. This occurs pressing "MENU/⟨⟨" and "ON/VIEW" together. When Demo mode is active, LED are on and they follow hypothetical RPM variation.

When the device is in Demo mode "⟩⟩/OFF" is disabled: to switch it off press "ON/VIEW" and "MEM/OK" together.

To stop Demo mode:

- turned MyChorn5 off
- press "MENU/⟨⟨" and – keeping it pressed – press ON/VIEW"