



FAQ

Frequently asked questions

Wi-Fi Password





Wi-Fi

Wi-Fi Password

Question:

I can't remember the password and I can't access to MyChron5.

Answer:

Enter Wi-Fi page of MyChron5. Select "WiFi Reset CFG", press OK and all the settings will be reset: now your device can be connected to a PC to set a new password.