




 
• LAP TIMERS • LOGGERS • CAMERAS • DASHES • SENSORS • AND MORE


SHOP NOW

AiM Lotus cluster - Installation guide


Remove the indicated original parts.

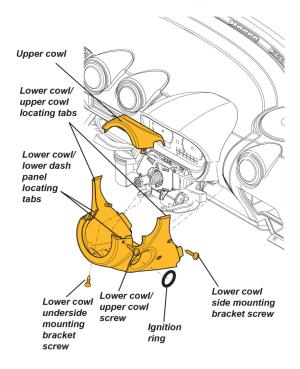




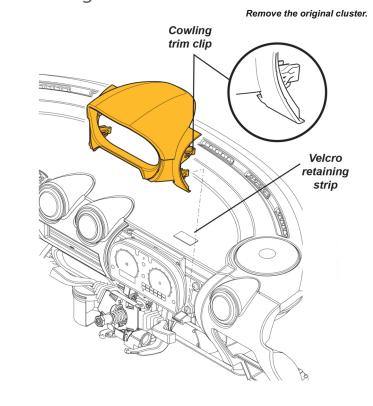

Remove the original dashboard.

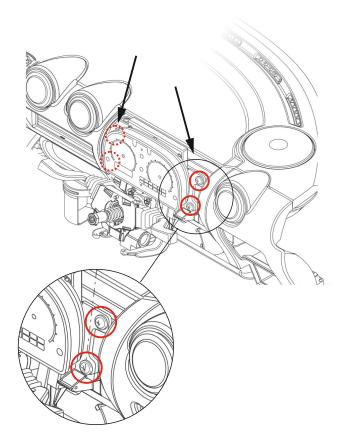

Install the MX2E on the original bracket.

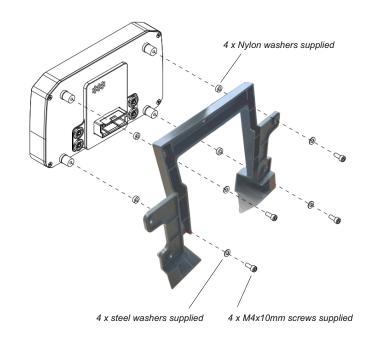



AiM Lotus cluster

Installation guide

Connect MX2E with AiM cluster.

