

PDM32 and an Immobiliser

Due to the security concerns about having an immobiliser defeated by reading the how to guides, this will not be a step by step walkthrough.

An immobiliser can be connected by can 2 and the key reading coil would be energised when the key was inserted in the ignition switch or when the doors were opened and for 3 minutes after unless the dash was turned on.

The ecu and other outputs would only be activated if the immobiliser gave the correct code to the PDM.

Remote Key is similar but uses a low power radio signal instead of a coil to pick up the authorised key.