aimshop

• LAP TIMERS • LOGGERS • CAMERAS • DASHES • SENSORS • AND MORE

SHOP NOW

Figure 1/12

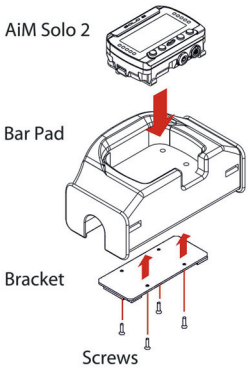

Fix Solo 2 on the metal plate using the screws and the Allen key included in the kit

Figure 2/12

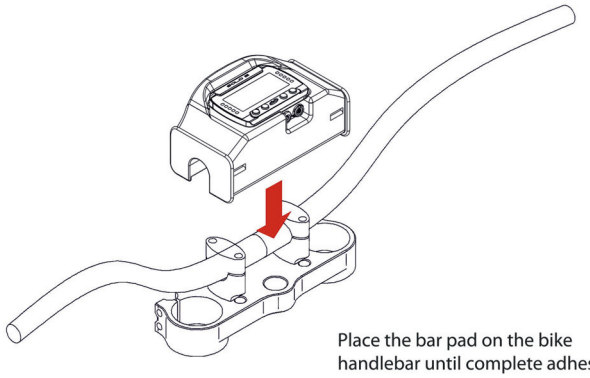

Place the bar pad on the bike handlebar until complete adhesion

Figure 3/12

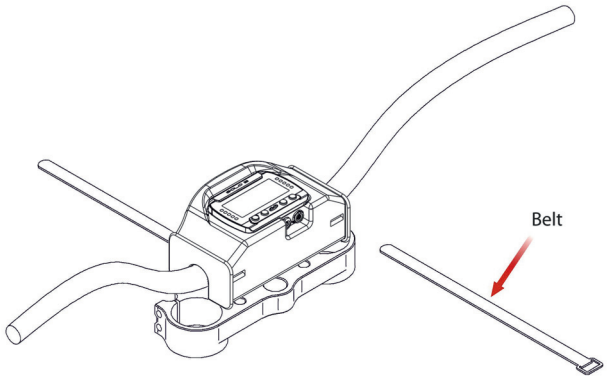

Insert Velcro belts in the Bar Pad slots keeping the writing turned down (see figure 4)

Figure 4/12

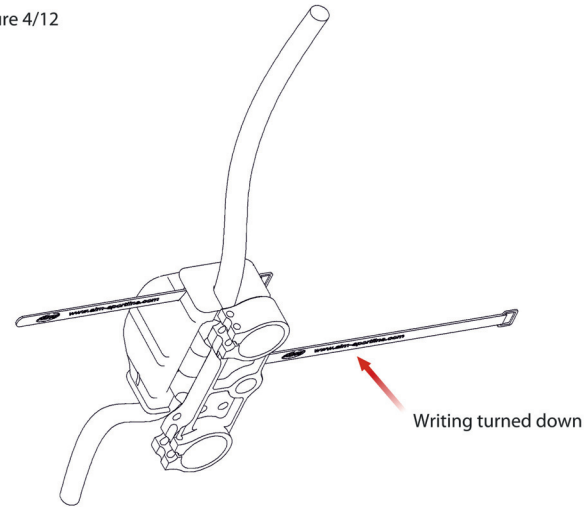

Figure 5/12

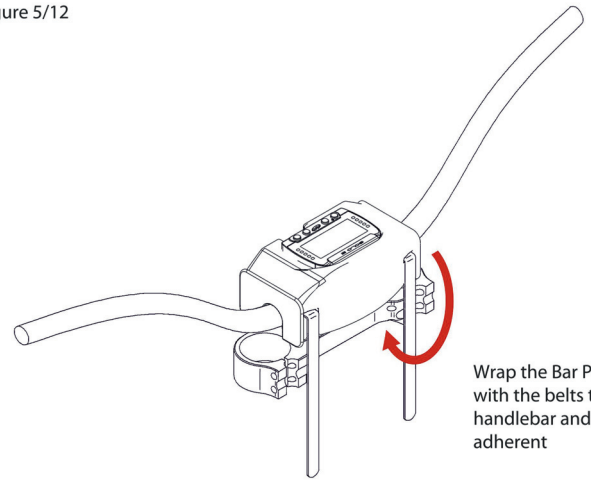

Wrap the Bar Pad with the belts to keep handlebar and support adherent

Figure 6/12

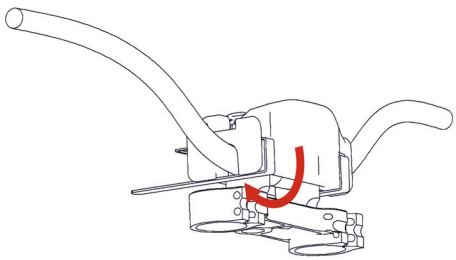

VISIT SUPPORT CENTER | SOFTWARE DOWNLOADS | FIRMWARE UPDATES | PRODUCT DOCUMENTATION

AiM Solo 2 Bar Pad Motocross for handle bars without cross brace

Installation guide

Figure 7/12

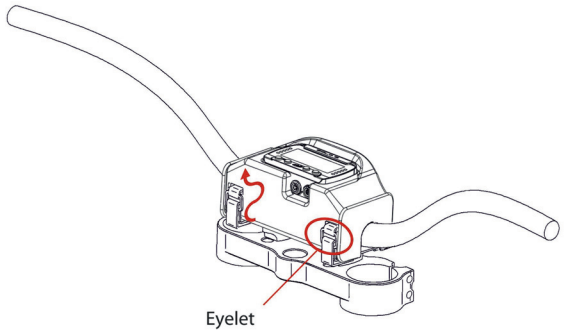

Make the belt pass in its eyelet and couple male Velcro with female one

Figure 8/12

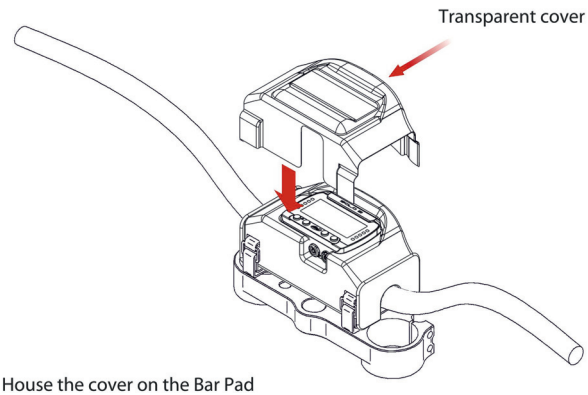

House the cover on the Bar Pad

Figure 9/12

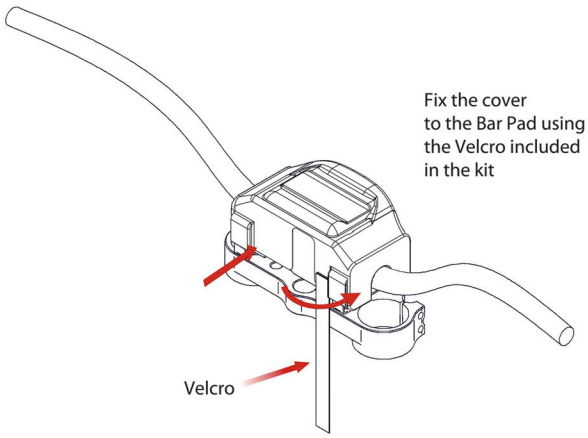

Fix the cover to the Bar Pad using the Velcro included in the kit

Figure 10/12

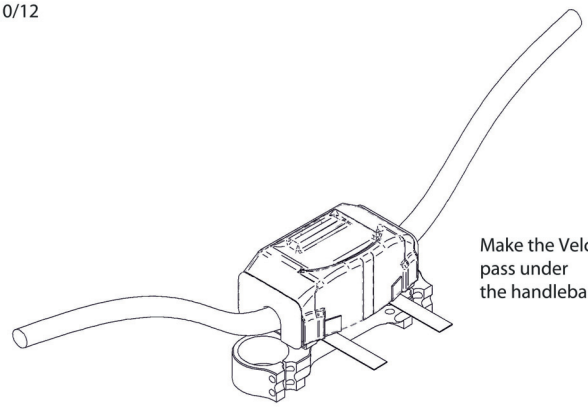

Make the Velcro pass under the handlebar...

Figure 11/12

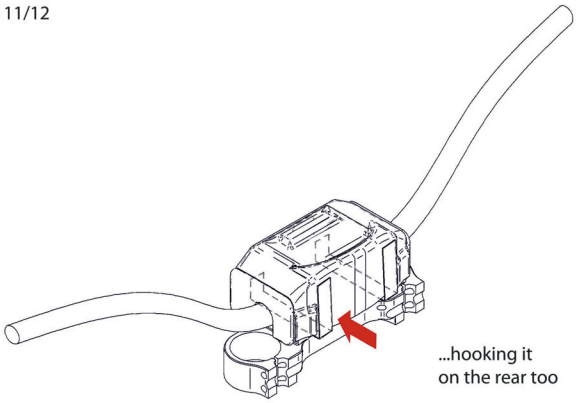

...hooking it on the rear too

Figure 12/12

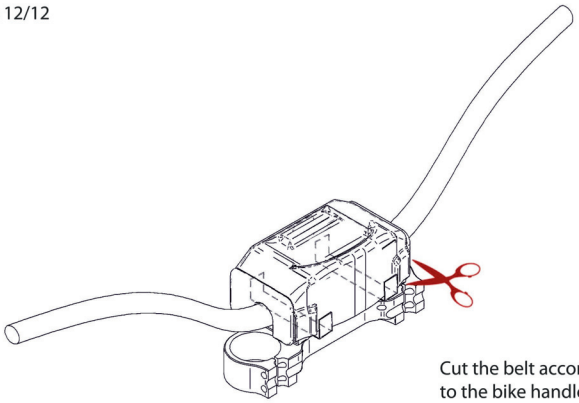

Cut the belt according to the bike handlebar measure

AiM Technologies, Unit8 Riverside, Campbell Road, Stoke-on-Trent, ST4 4RJ Tel. +44 01782 393 843 |
sales@aimshop.com | www.aimshop.com