



AiM User Guide

Kit EVO4S e SOLO 2 DL for Ducati Multistrada 1200 (2010-2011)

Release 1.00



KIT



VISIT SUPPORT CENTER

SOFTWARE DOWNLOADS

FIRMWARE UPDATES

PRODUCT DOCUMENTATION





1

Models and years

This manual explains how to connect EVO4S and SOLO 2 DL to the bike engine control unit (ECU).

Compatible models are:

- Ducati Multistrada 1200 2010-2011

Warning: for these models/years AiM recommends not to remove the stock dash. Doing so will disable some of the bike functions or safety controls. AiM Tech srl will not be held responsible for any consequences that may result from the replacement of the original instrumentation cluster.

2

Kit content and part numbers

AiM developed a specific connection cable to the ECU for EVO4S/SOLO 2 DL.


2.1

AiM Cable for EVO4S/SOLO 2 DL

Part number for **EVO4S/SOLO 2 DL** connection cable for **Ducati** – shown below – is: **V02569170**.



Following image shows the cable constructive scheme.

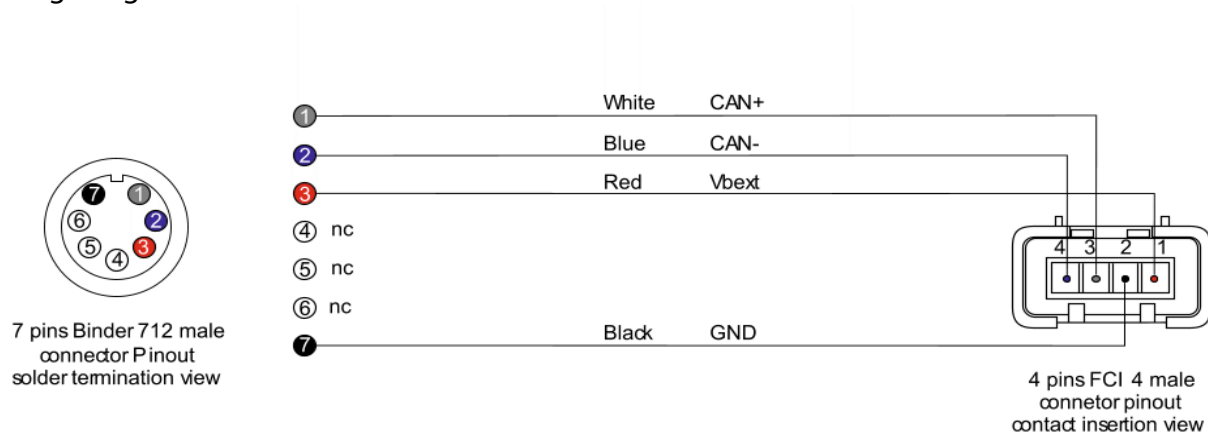

3

EVO4S/SOLO 2 DL connection

Ducati Hypermotard communication line is based on CAN protocol that can be reached through the DDA connector placed under the bike seat and shown on the right.



4

Configuration with Race Studio 3

Before connecting EVO4S/SOLO 2 DL to the bike ECU, set all functions using the AiM software Race Studio 3. The parameters to set in the AiM device configuration section are ("ECU Stream" tab):

- ECU Manufacturer: "Ducati"
- ECU Model: "Multistrada_1200"

After this first selection, enable/disable the 120Ohm resistor and the "Silent" mode on CAN Bus as follows:

<input type="checkbox"/>	Enable the CAN Bus 120 Ohm Resistor
<input checked="" type="checkbox"/>	Silent on CAN Bus

5

"Ducati - Multistrada_1200" protocol

Received channels by EVO4S/SOLO 2 DL configured with "Ducati – Multistrada_1200" protocol are:

CHANNEL NAME	FUNCTION
MU RPM	RPM
MU SPEED	Vehicle speed
MU TPS HAND	Manual Throttle position sensor
MU TPS1	Throttle position sensor 1
MU TPS2	Throttle position sensor 2
MU WATER T	Water Temperature
MU INTK_AIR T	Intake air temperature
MU AMBIENT T	Ambient temperature
MU BATTERY	Battery voltage
MU BRAKE SW	Brake switch
MU CLUTCH SW	Clutch switch
MU GEAR	Engaged gear
MU NEUTRAL SW	Neutral switch
MU OILP SW	Oil pressure switch
MU TURN RIGHT	Right turn indicator
MU TURN LEFT	Left turn indicator

Technical note: not all data channels outlined in the ECU template are validated for each manufacturer model or variant; some of the outlined channels are model and year specific, and therefore may not be applicable.